



Illustrated Parts List

Model Series

10T500

TYPE NUMBERS
0100 through 3840.

TABLE OF CONTENTS

 
Air Cleaner	6
Blower Housing/Shrouds	7
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

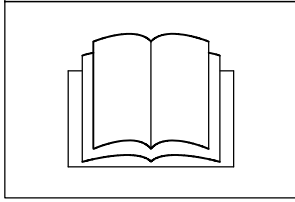

1330 REPAIR MANUAL

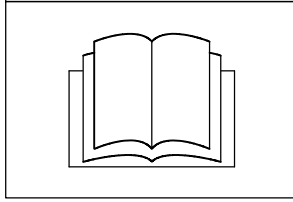 


1319 WARNING LABEL








WARNING	
	Read and follow Operating instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

 
358 ENGINE GASKET SET

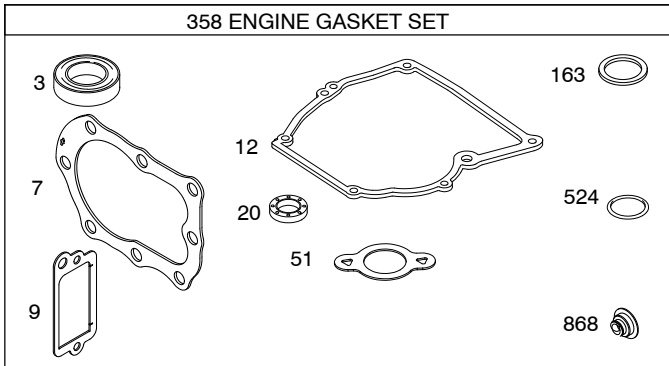



1095 VALVE GASKET SET







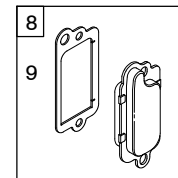 
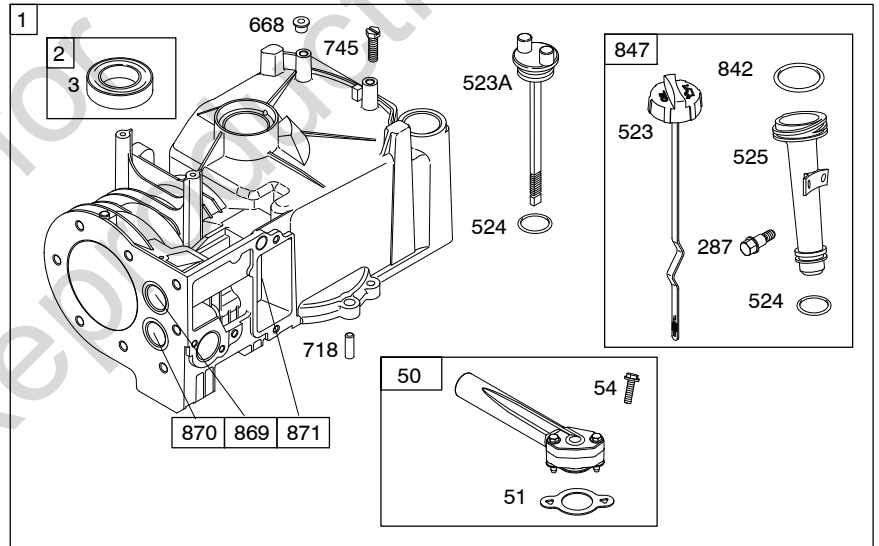 
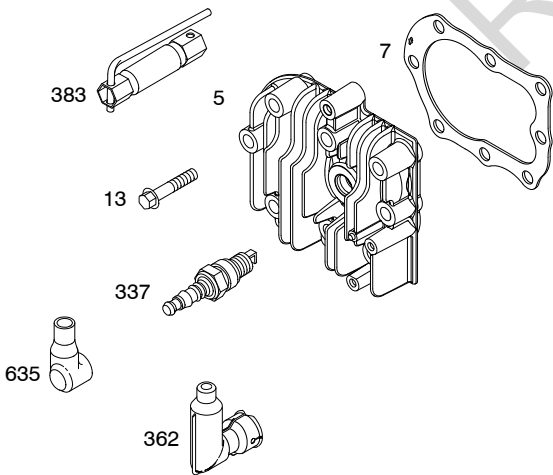 
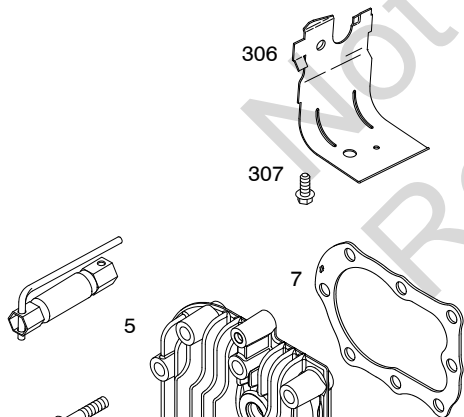 
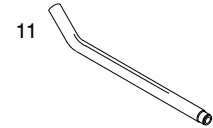 
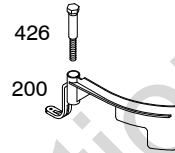 
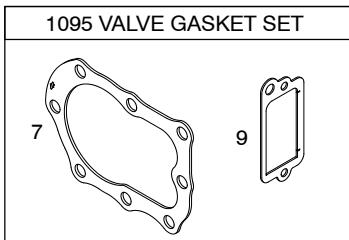 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3718-2 Assemblies include all parts shown in frames. 10/13/2010










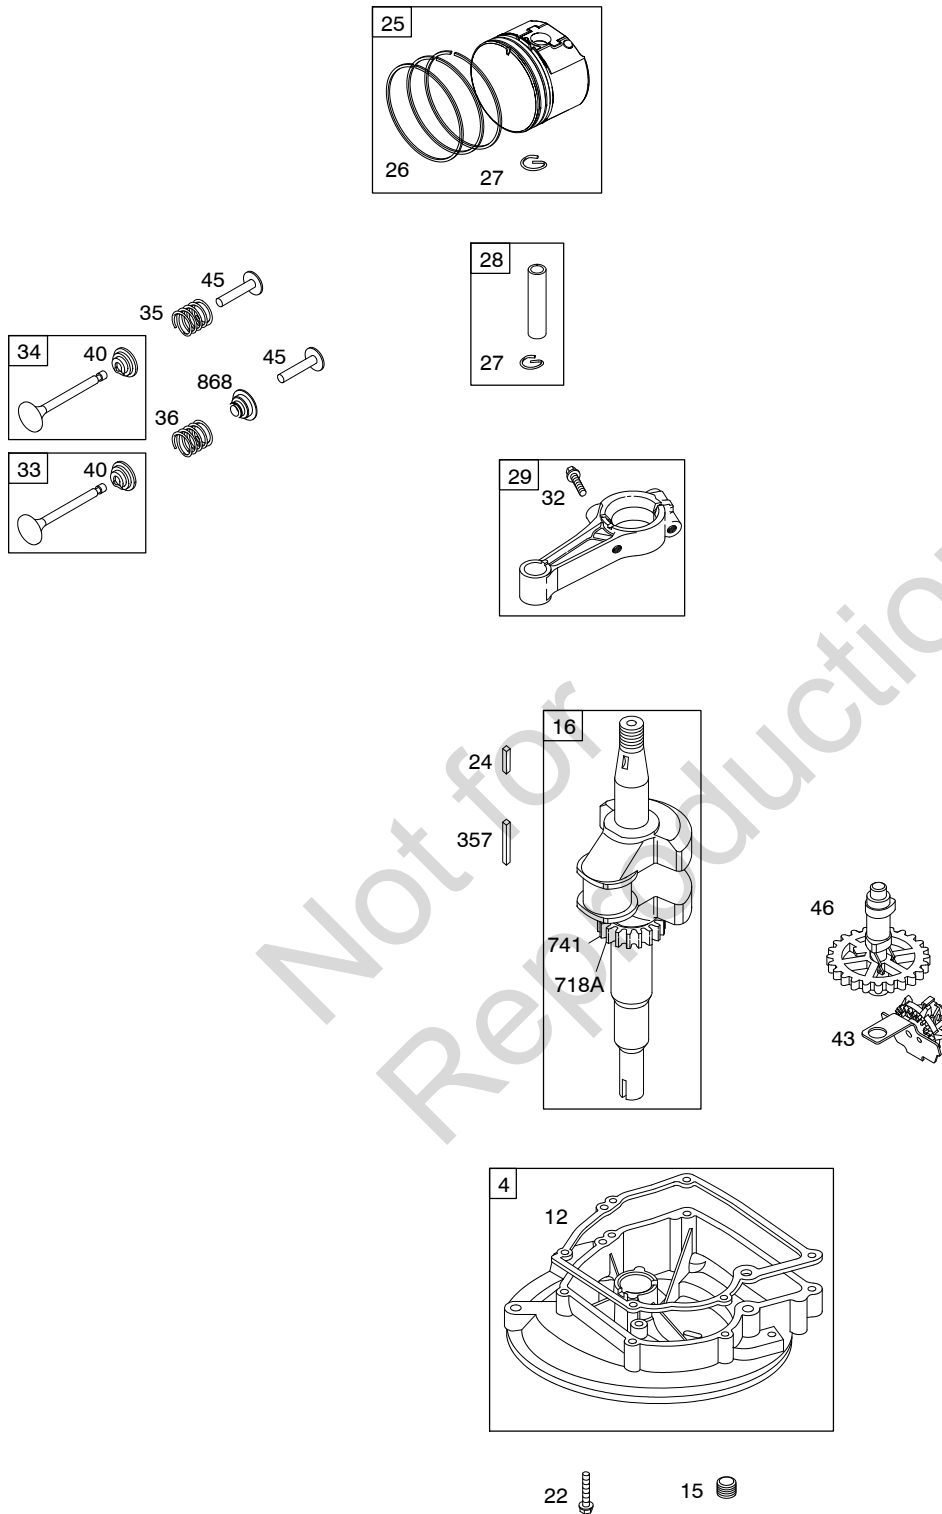 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3718-3 Assemblies include all parts shown in frames. 10/13/2010









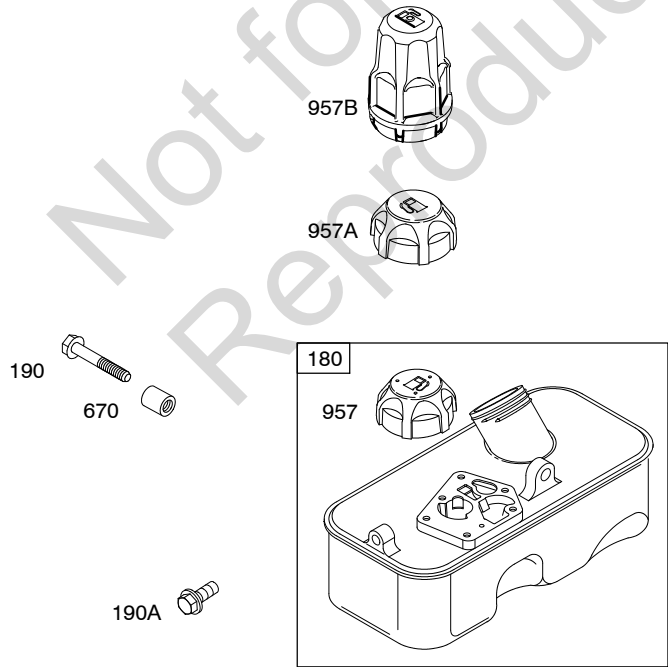 
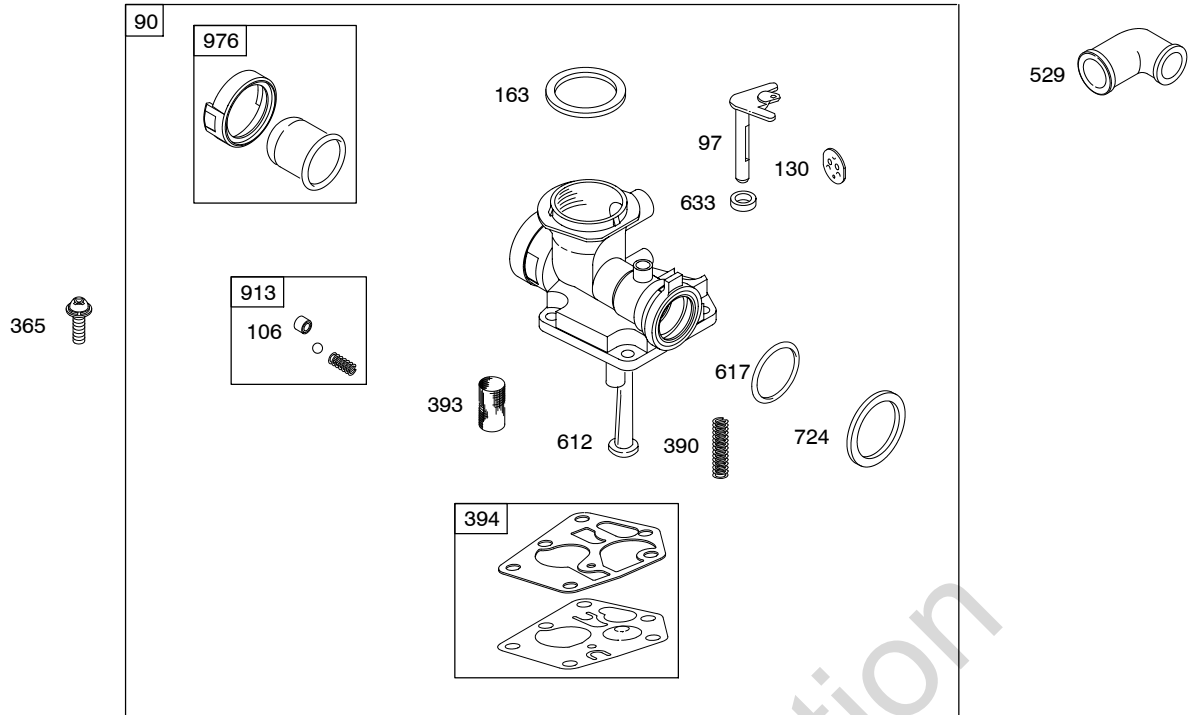 


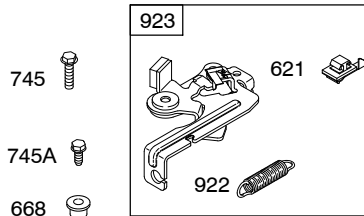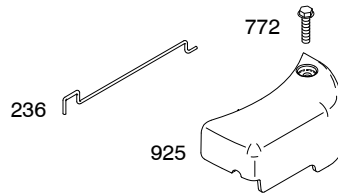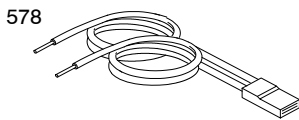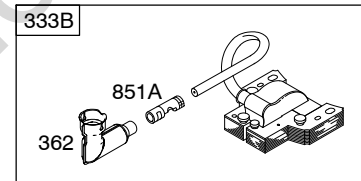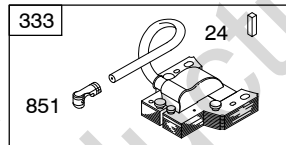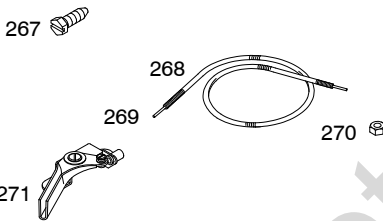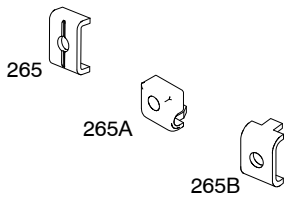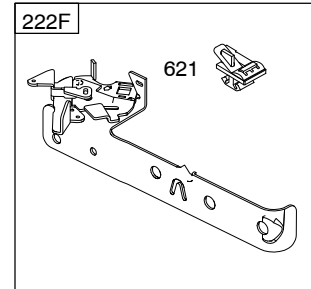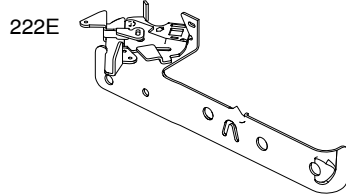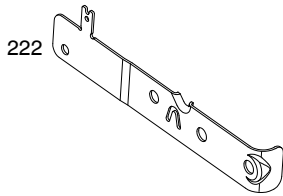             

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-5 Assemblies include all parts shown in frames. 10/13/2010

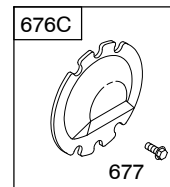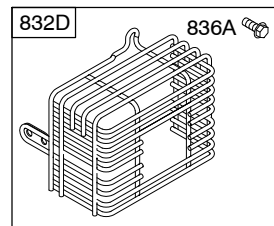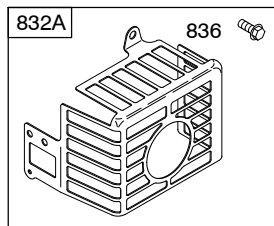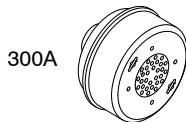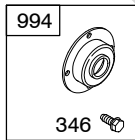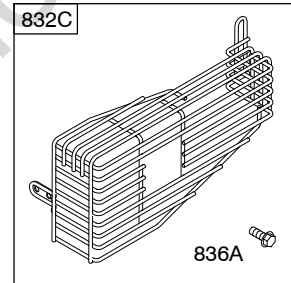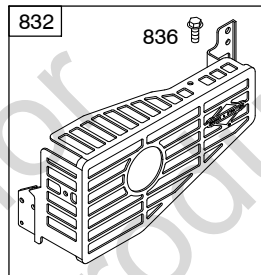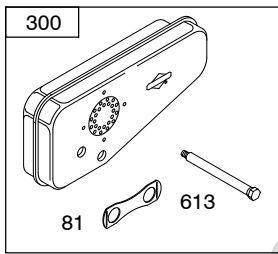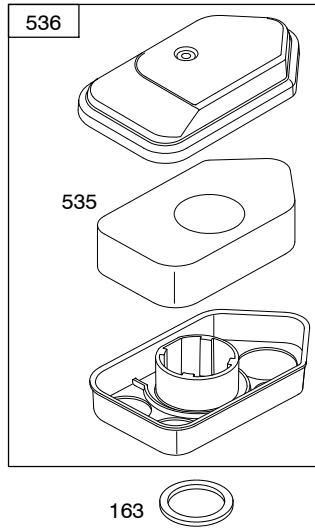          

1036 EMISSIONS LABEL

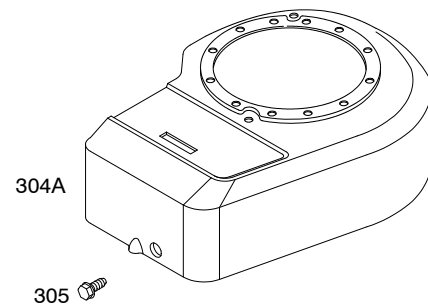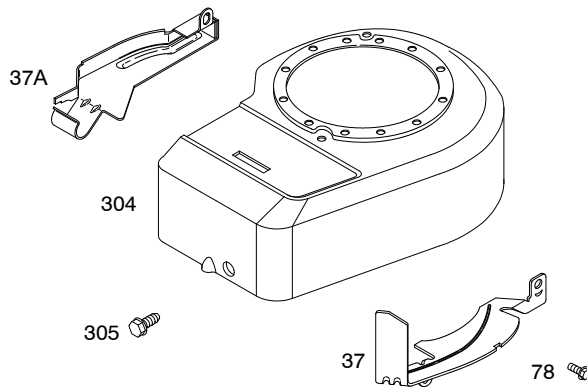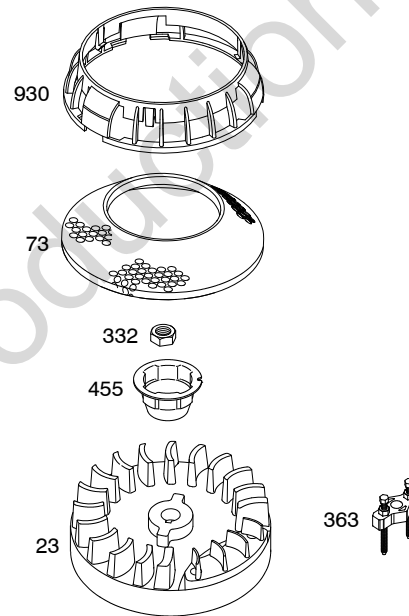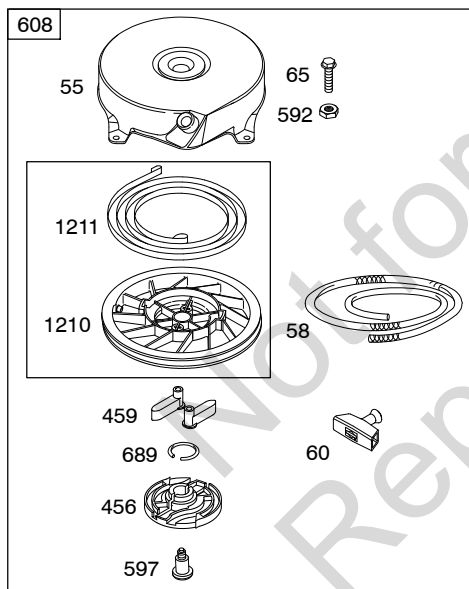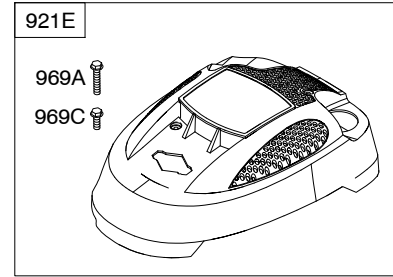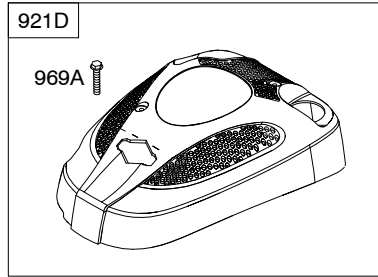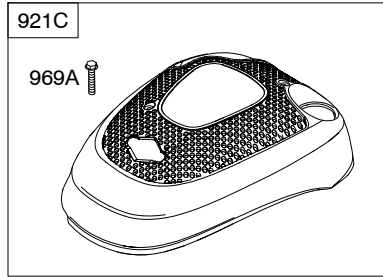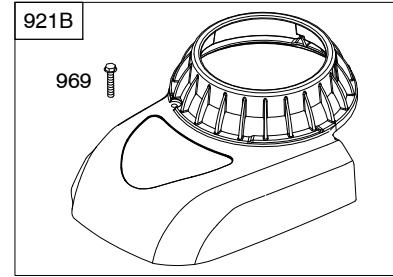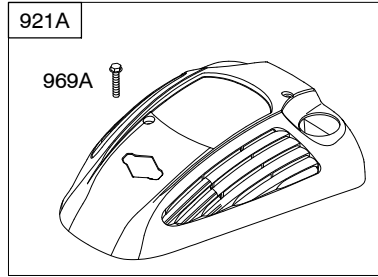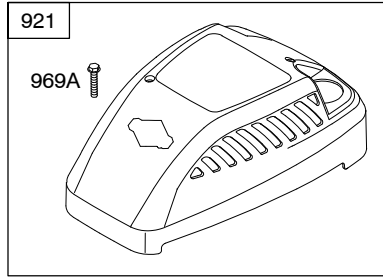          

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3718-7 Assemblies include all parts shown in frames. 10/13/2010

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	16	796219	Crankshaft		796216	Crankshaft
2	796961	Kit-Bushing/Seal (Magneto Side)			Used on Type No(s). 0222.			Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0117, 0120, 0136, 0139, 0141, 0142, 0143, 0144, 0153, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0171, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0183, 0184, 0186, 0187, 0188, 0189, 0195, 0205, 0207, 0208, 0210, 0215, 0217, 0218, 0220, 0246, 0253, 0254, 0255, 0257, 0259, 0262, 0263, 1111, 1486, 2110.
3	299819S	Seal-Oil (Magneto Side)			----- Note ----- 796218 Crankshaft Used on Type No(s). 0121, 0123, 0130, 0146, 0178, 0197, 0204, 0206, 0212, 0214, 0216, 0501, 0550.			
4	798264	Sump-Engine						
5	790169	Head-Cylinder						
7	698717	Gasket-Cylinder Head						
8	791781	Breather Assembly						
9	695890	Gasket-Breather						
10	691666	Screw (Breather Assembly)						
11	691245	Tube-Breather						
12	692218	Gasket-Crankcase (.015" Thick) (Standard)						
		----- Note ----- 270895 Gasket- Crankcase (.005" Thick) 270896 Gasket- Crankcase (.009" Thick)						
13	691640	Screw (Cylinder Head)				20	391483S	Seal-Oil (PTO Side)
15	691680	Plug-Oil Drain				22	692551	Screw (Crankcase Cover/Sump)
						23	795549	Flywheel
								----- Note ----- 795695 Flywheel Used on Type No(s). 0113, 0116, 0120, 0121, 0123, 0130, 0133, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0178, 0186, 0195, 0197, 0204, 0206, 0212, 0213, 0214, 0215, 0216, 0217, 0220, 0254, 0255, 0550.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3718-8 Assemblies include all parts shown in frames. 10/13/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	55	692144	Housing-Rewind Starter	60	691915	Grip-Starter Rope
25	795691	Piston Assembly (Standard)	58	697316	Rope-Starter (88 5/8" Long)	65	690837	Screw (Rewind Starter)
		----- Note -----			Used on Type No(s).	73	699850	Screen-Rotating
		795689 Piston Assembly (.020" Oversize)			0100, 0111, 0112, 0115, 0117, 0118, 0120, 0121, 0127, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0181, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0215, 0218, 0221, 0222, 0246, 0250, 0251, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 2110, 3764, 3838, 3840.	78	692198	Screw (Flywheel Guard)
26	795690	Ring Set (Standard)			----- Note -----	81	691179	Lock-Muffler Screw
		795688 Ring Set (.020" Oversize)			691901 Seat-Inlet	90	795477	Carburetor
27	691588	Lock-Piston Pin			130 691190 Valve-Throttle	97	691931	Shaft-Throttle
28	699659	Pin-Piston (Standard)			106 691901 Seat-Inlet	106	691901	Seat-Inlet
29	699654	Rod-Connecting			130 691190 Valve-Throttle	163	271139S	Gasket-Air Cleaner
32	691664	Screw (Connecting Rod)			180 494406 Tank-Fuel	180	494406	Tank-Fuel
33	296676	Valve-Exhaust			188 692198 Screw (Control Bracket)	188	692198	Screw (Control Bracket)
34	296677	Valve-Intake			190 691640 Screw (Fuel Tank) (1 3/4" Long)	190	691640	Screw (Fuel Tank) (1 3/4" Long)
35	690520	Spring-Valve (Intake)			190A 691108 Screw (Fuel Tank) (9/16" Long)	190A	691108	Screw (Fuel Tank) (9/16" Long)
36	690520	Spring-Valve (Exhaust)			200 691912 Blade-Governor	200	691912	Blade-Governor
37	691209	Guard-Flywheel (Muffler Side)			201 690347 Link-Air Vane	201	690347	Link-Air Vane
37A	690482	Guard-Flywheel (Carburetor Side)						
40	692194	Retainer-Valve						
43	698690	Slinger-Governor/Oil						
45	691762	Tappet-Valve						
46	691998	Camshaft						
50	699644	Manifold-Intake						
51	699649	Gasket-Intake						
54	691111	Screw (Intake Manifold)						
					----- Note -----			
					691921 Rope-Starter (70" Long)			
					Used on Type No(s).			
					0113, 0114, 0116, 0123, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0254, 0255, 0550.			

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
209	691297	Spring-Governor Used on Type No(s). 0100, 0115, 0116, 0150, 0161, 0162, 0186, 0215, 0222, 0250, 0255, 0260, 0263, 0457E1, 0495E1, 0500E1, 0501, 1041, 1264, 1303, 1316, 1414, 1486, 2028. ----- Note ----- 691297 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0457B1, 0495B1, 0500B1. 691297 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0457B1, 0495B1, 0500B1, 1022, 1023, 1053, 1058, 3838. 691862 Spring-Governor Used on Type No(s). 0123, 0130, 0178, 0197, 0206, 0212, 0214, 0216, 0220, 0550. 690254 Spring-Governor Used on Type No(s). 0111, 0112, 0113, 0118, 0120, 0132, 0137, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0200, 0202, 0203, 0217, 0218, 0221, 0246, 0251, 0252, 0253, 0254, 0258, 0259, 0264, 0609, 2008, 2010, 2011, 2027, 2035, 2110.									
					690254 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0998, 1111. 690254 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0998, 1111. 690251 Spring-Governor Used on Type No(s). 0114, 0117, 0127, 0136, 0139, 0140, 0141, 0142, 0144, 0145, 0177, 0183, 0184, 0199, 0205, 0207, 0208, 0209, 0210, 0256, 0257, 0262, 0265, 0764, 0838, 0840, 1096, 1336, 2034. 690251 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0869, 0931, 1000, 3764, 3838, 3840. 690251 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0833, 0869, 0931, 1000, 1056, 3764, 3840. 690250 Spring-Governor Used on Type No(s). 0121E1, 0133, 0204, 0213. 690250 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0121B1.						
						211	691859	Spring-Governed Idle			
								690250 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0121B1. 795160 Spring-Governor (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-10 Assemblies include all parts shown in frames. 10/13/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	698725	Bracket-Control (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.		691446	Bracket-Control (Used After Code Date 07111500). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.	267	691044	Screw (Casing Clamp)
222E	691446	Bracket-Control Used on Type No(s). 0100, 0111, 0112, 0118, 0121E1, 0132, 0136, 0137, 0141, 0144, 0145, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0221, 0246, 0250, 0251, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457E1, 0495E1, 0500E1, 0501, 0609, 0764, 0838, 0840, 1041, 1096, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2035, 2110. ----- Note ----- 691446 Bracket-Control (Used Before Code Date 07092400). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0869, 0931, 0998, 1000, 1111, 3764, 3838, 3840.	222F	691445	Bracket-Control Used on Type No(s). 0113, 0114, 0115, 0116, 0117, 0120, 0123, 0127, 0130, 0133, 0139, 0140, 0142, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0183, 0184, 0186, 0195, 0197, 0200, 0206, 0210, 0212, 0213, 0214, 0215, 0216, 0217, 0218, 0220, 0222, 0254, 0255, 0257, 0260, 0262, 0264, 0550, 2028, 2034.	268	691025	Casing-Control Wire (Cut To Required Length)
			236	691867	Link-Lockout Used on Type No(s). 0139, 0140.	269	691026	Wire-Control (Cut To Required Length)
			265	692179	Clamp-Casing Used on Type No(s). 0116, 0142, 0144, 0145, 0166, 0183, 0184.	270	691027	Nut (Control Wire Casing)
			265A	690798	Clamp-Casing Used on Type No(s). 0100, 0117, 0120, 0132, 0139, 0140, 0150, 0162, 0179, 0195, 0198, 0199, 0200, 0205, 0207, 0208, 0209, 0213, 0215, 0218, 0220, 0256, 0264, 2011, 2028.	271	691028	Lever-Control
			265B	691024	Clamp-Casing Used on Type No(s). 0115, 0118, 0127, 0147, 0210, 0257, 0260, 0262, 2034.	287	691002	Screw (Dipstick Tube)
						300	692307	Muffler (Super Lo Tone) Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120, 0121, 0127, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0212, 0213, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0609, 0833, 0838, 0931, 0998, 1000, 1111, 1336, 2011, 2027, 2028, 2034, 2035, 2110, 3838.

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300A	394569S	Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0181, 0206, 0214, 0215, 0216, 0222, 0246, 0250, 0251, 0457, 0495, 0500, 0501, 0550, 0764, 0840, 0869, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1414, 1486, 2008, 2010, 3764, 3840.	304A	694236	Housing-Blower (Compliance Engines) Used on Type No(s). 0111, 0112, 0118, 0132, 0137, 0144, 0145, 0147, 0150, 0157, 0158, 0169, 0170, 0171, 0172, 0173, 0176, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0205, 0207, 0208, 0209, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2035, 2110, 3764, 3838, 3840.	333	793281	Armature-Magneto
						333B	793352	Armature-Magneto Used on Type No(s). 0111, 0112, 0113, 0114, 0116, 0118, 0120B2, 0123, 0132, 0133, 0137, 0139, 0140, 0142, 0143, 0146, 0147, 0162, 0166, 0168, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0215, 0216, 0217, 0218, 0220, 0221, 0222, 0253, 0254, 0255, 0256, 0258, 0259, 0264, 0265, 0609, 0833, 0840, 0869, 0998, 1000, 1041, 1111, 1264, 1414, 2008, 2010, 2011, 3840.
304	694051	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0113, 0114, 0115, 0123, 0127, 0130, 0142, 0143, 0146, 0162, 0175, 0177, 0183, 0184, 0200, 0206, 0210, 0214, 0218, 0220, 0222, 0257, 0260, 0262, 0550, 2028, 2034. ----- Note ----- 691484 Housing- Blower (Compliance Engines) Used on Type No(s). 0100, 0136, 0139, 0140, 0141, 0153, 0155, 0168, 0179, 0221, 0246, 0250, 0251, 1111.				334	691061	Screw (Magneto Armature) (1" Long)
						335	691107	Screw (Magneto Armature With Air Vane) (1 15/16" Long)
			305	692198	Screw (Blower Housing)			
			306	690400	Shield-Cylinder			
			307	690345	Screw (Cylinder Shield)			
			332	690662	Nut (Flywheel)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	796112S	Plug-Spark ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0100, 0115, 0117, 0120B1, 0127, 0136, 0141, 0144, 0145, 0150, 0153, 0155, 0157, 0158, 0161, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0183, 0184, 0210, 0246, 0250, 0251, 0252, 0257, 0260, 0262, 0263, 2028, 2034, 2110.	455	691236	Cup-Flywheel	524	691876	Seal-Dipstick Tube
			456	692299	Plate-Pawl Friction	525	691320	Tube-Dipstick
			459	281505S	Pawl-Ratchet	529	692189	Grommet
			523	692040	Dipstick Used on Type No(s). 0111, 0112, 0115, 0117, 0118, 0120, 0123, 0127, 0130, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0150, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0175, 0177, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0191, 0193, 0195, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0495, 0500, 0550, 0609, 0764, 0833, 0838, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2028, 2035, 2110, 3764, 3838.	534	691417	Screw (Air Cleaner)
						535	698369	Filter-Air Cleaner Foam
346	690661	Screw (Spark Arrester) Used on Type No(s). 0222, 0833.				536	698472	Cleaner-Air
356	692390	Wire-Stop				578	398153	Wire Assembly
356C	793399	Wire-Stop				592	690800	Nut (Rewind Starter)
357	692191	Key-Drive Pulley Used on Type No(s). 0197.				597	691696	Screw (Pawl Friction Plate)
358	699933	Gasket Set-Engine						
362	793351	Shield-Spark Plug						
363	19069	Puller-Flywheel						
365	790029	Screw (Carburetor)						
383	89838S	Wrench-Spark Plug						
390	691839	Spring-Choke Diaphragm						
393	691837	Screen-Carburetor						
394	795083	Diaphragm-Carburetor						
426	691107	Screw (Governor Blade)	523A	691913	Dipstick Used on Type No(s). 0100, 0113, 0114, 0116, 0121, 0133, 0153, 0155, 0157, 0161, 0162, 0166, 0174, 0176, 0178, 0179, 0189, 0190, 0197, 0198, 0199, 0203, 0204, 0205, 0207, 0208, 0209, 0212, 0213, 0215, 0216, 0217, 0221, 0246, 0250, 0251, 0254, 0255, 0457, 0501, 2027, 2034.			

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	499706	Starter-Rewind (88 5/8" Rope) Used on Type No(s). 0100, 0111, 0112, 0115, 0117, 0118, 0120, 0121, 0127, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0215, 0218, 0221, 0222, 0246, 0250, 0251, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 2110, 3764, 3838, 3840.	612	496046S	Tube-Pick Up	832A	699670	Guard-Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0206, 0216, 0250, 0550.
			613	691413	Screw (Muffler)			
			617	270344S	Seal-O Ring (Intake Manifold)	832C	790743	Guard-Muffler Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2011, 2027, 2034, 2035, 2110.
			621	692310	Switch-Stop			
			633	691321	Seal-Choke/Throttle Shaft (Throttle)	832D	790744	Guard-Muffler Used on Type No(s). 0181, 0214, 0222, 0246, 0251, 2008, 2010.
			635	66538S	Boot-Spark Plug			
			668	692889	Spacer			
			670	691633	Spacer-Fuel Tank			
			676C	393756	Deflector-Muffler Used on Type No(s). 0215.			
			677	690661	Screw (Muffler Deflector) Used on Type No(s). 0215.			
			689	691855	Spring-Friction			
			718	690959	Pin-Locating (Cylinder)			
			718A	499047	Pin-Locating (Crankshaft)			
			724	697478	Retainer-Seal			
			729	690586	Clip-Wire			
			741	796210	Gear-Timing (Used After Code Date 08071300).			
			741	691805	Gear-Timing (Used Before Code Date 08071400).			
			745	691146	Screw (Brake) (7/8" Long)			
			745A	690859	Screw (Brake) (1/2" Long)			
			772	691111	Screw (Linkage Cover)			
			832	699299	Guard-Muffler (Super Lo Tone) Used on Type No(s). 0100, 0120B1, 0127, 0144, 0145, 0263.			
		----- Note ----- 690101 Starter- Rewind (70" Rope) Used on Type No(s). 0113, 0114, 0116, 0123, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0254, 0255, 0550.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-14 Assemblies include all parts shown in frames. 10/13/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836	690664	Screw (Muffler Guard) Used on Type No(s). 0100, 0120B1, 0123, 0127, 0130, 0144, 0145, 0178, 0206, 0216, 0250, 0263, 0550.	836B	691125	Screw (Muffler Guard) (5/8" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0222, 0246, 0251, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2008, 2010, 2011, 2027, 2034, 2035, 2110.	921A	793973	Cover-Blower Housing Used on Type No(s). 0111, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0173, 0181, 0184, 0193, 0200, 0202, 0206, 0214, 0218, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0263, 0264, 0495, 0609, 0838, 0931, 1053, 1058, 1096, 2008, 2011, 2035, 3838.
836A	790745	Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0214, 0215, 0217, 0218, 0220, 0221, 0222, 0246, 0251, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2008, 2010, 2011, 2027, 2034, 2035, 2110.	842	691870	Seal-O Ring (Dipstick Tube)	921B	699796	Cover-Blower Housing Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 2027, 2028, 2034, 3764, 3840.
			847	691440	Dipstick/Tube Assembly	921C	792273	Cover-Blower Housing Used on Type No(s). 0500, 1023, 1041.
			851	493880S	Terminal-Spark Plug	921D	795397	Cover-Blower Housing Used on Type No(s). 0115, 0147, 0220, 0260, 0265.
			851A	692424	Terminal-Spark Plug	921E	796066	Cover-Blower Housing Used on Type No(s). 0147, 0210.
			868	697338	Seal-Valve	922	692135	Spring-Brake
			869	699641	Seat-Valve (Intake)	923	691487	Brake
			870	699642	Seat-Valve (Exhaust)	925	691349	Cover-Linkage
			871	699643	Bushing-Valve Guide (Exhaust)	930	691348	Guard-Rewind Used on Type No(s). 0100, 0116, 0117, 0120, 0133, 0139, 0140, 0141, 0153, 0155, 0161, 0162, 0166, 0174, 0176, 0179, 0186, 0195, 0197, 0213, 0217, 0221, 0246, 0250, 0251, 0254, 0255.
					----- Note ----- 63709 Bushing-Valve Guide (Intake)			
			913	494409	Seat-Check Valve			
			921	694044	Cover-Blower Housing Used on Type No(s). 0171, 0172, 0175, 0177, 0183, 2010, 2110.			

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	497929S	Cap-Fuel Tank	969A	799014	Screw	969C	799015	Screw
957A	791129	Cap-Fuel Tank Used on Type No(s). 0121, 0130, 0178, 0186, 0197, 0204, 0212, 0216, 0550.			(Blower Housing Cover) (Used After Code Date 10061300) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838.			(Blower Housing Cover) (Used After Code Date 10061300) Used on Type No(s). 0147, 0210.
957B	792878	Cap-Fuel Tank ----- Note ----- 792878 Cap-Fuel Tank Used on Type No(s). 0121, 0123, 0130, 0178, 0186, 0197, 0204, 0206, 0212, 0214, 0216, 0550.			----- Note ----- 796065 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0147, 0210.			----- Note ----- 796065 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0147, 0210.
969	799013	Screw (Blower Housing Cover) Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 2027, 2028, 2034, 3764, 3840.			----- Note ----- 694046 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838.			976 694394 Primer-Carburetor 994 792245 Arrester-Spark Used on Type No(s). 0222, 0833.
						1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
						1058	277038	Operator's Manual
						1095	498526	Gasket Set-Valve
						1210	499901	Pulley/Spring Assembly (Pulley)
						1211	499901	Pulley/Spring Assembly (Spring)
						1319	794467	Label-Warning
						1330	270962	Repair Manual

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-16 Assemblies include all parts shown in frames. 10/13/2010

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

