

### P.A. - S.r.I. - EQUIPAGGIAMENTI TECNICI DEL LAVAGGIO

VIA MILANO, 13 - 42048 RUBIERA (REGGIO EMILIA) - ITALY - Tel. +39 0522 623611 (10 linee) Fax +39 0522 629600 - R.E.A. RE 156319 - Registro Imprese RE 11535 - Mecc. RE 013446 C.F. e P. IVA 01035950359 - Cap. Soc. i.v. € 1.560.000,00 - Codice Identificativo C.E.E. IT 01035950359 ART. 2497 - BIS C.C. DIREZIONE E COORDINAMENTO BENETTI SII R.I. TRIB. DI RE 01480690351 http://www.pa-etl.it - E-mail: info@pa-etl.it





# PR16 - PRESSURE SWITCH with electric signal



#### Technical manual: E 811

Electro-mechanical device, which, upon reaching a pre-set pressure, opens or closes an electrical control contact.



- 29.0035.10 rated 40bar 4.5 MPa att. Sst
- 29.0035.15 rated 25bar 2.5 MPa att. Sst
- 29.0035.25 rated 25bar 2.5 MPa att. Sst
- 29.0035.30 rated 40bar 4 MPa att. Sst
- 29.0035.50 rated 40bar 4 MPa att. Sst
- 29.0035.52 rated 25bar 2.5 MPa att. Sst
- 29.0040.00 rated 40bar 4 MPa att. Brass
- 29.0040.20 rated 40bar 4 MPa att. Brass
- 29.0040.30 rated 25bar 2.5 MPa att. Brass
- 29.0040.40 rated 15bar 1.5 MPa att. Brass

- Electrical insulation: IP55
- Possibility to choose from 3 different pressure settings acting on the electrical switch.
- Three core cable
- Threaded connections; either in Sst or Brass versions.

	TECHNICAL SPECIFICATIONS									
PART NUMBER	RATED PRESSURE bar - MPa	PERMISSIBLE PRESSURE bar - MPa	INTERVENT. PRESSURE bar - MPa	DIFFERENTIAL WORKING PRESSURE %	(1) MAX.TEMP OF THE FLUID ℃	INLET	WEIGHT g			
29.0035.10	250 - 25	280 - 28	40 – 4	±6	90	G 3/8 M	260			
29.0035.15	250 - 25	280 - 28	25 – 2.5	±6	90	G 3/8 M	260			
29.0035.25	250 - 25	280 - 28	25 – 2.5	±6	90	G 1/4 M	260			
29.0035.30	250 - 25	280 - 28	40 - 4	±6	90	G 1/4 M	260			
29.0035.50	250 - 25	280 - 28	40 - 4	±6	90	1/4 Npt M	260			
29.0035.52	250 - 25	280 - 28	25 – 2.5	±6	90	1/4 Npt M	260			
29.0040.00	250 - 25	280 - 28	40 - 4	±6	90	G 3/8 M	260			
29.0040.20	250 - 25	280 - 28	40 - 4	±6	90	G 1/4 M	260			
29.0040.30	250 - 25	280 - 28	25 – 2.5	±6	90	G 1/4 M	260			
29.0040.40	250 - 25	280 - 28	15 – 1.5	±6	90	G 1/4 M	260			

#### FLECTRICAL SPECIFICATIONS

Max rated voltage: 250 V

Breaking switch: 16 (A) – resistive load - 6 (A) – inductive load Cable length: 1200 mm – Electric wire: 3 x 1 mm

Max.amperage cable: 10 A

Environment temp.: 75 ℃ – Type of action: 1C


Lifetime electrical component: 50.000 commutations, T.85°C, a 250V a.c.in line with CEE 24- VDE 0630

Pollution situation of the device con-High

1) The Pressure switch has been designed for a continuous use at a water temperature of 60°C. It can resist for short periods at a maximum temperature of 90°C.

Instruction manual, maintenance, installation, spare parts.	n. 12.9811.00
For a correct utilization, follow the directions of this manual.	
Re-print them on the use and maintenance booklet of the machine	

# **DIMENSIONAL DRAWING**

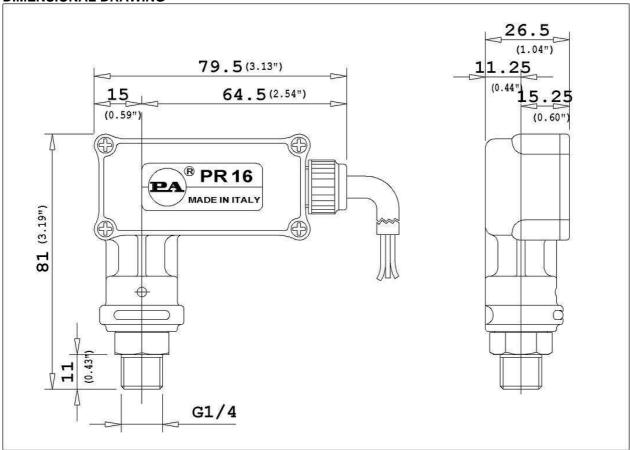

#### **SELECTION**

Choose the appropriate pressure switch for the rated pressure of the system and for the required intervention of the electric commuta-


# Black > 40 bar - 4.5 MPa - Red > 25 bar - 2.5 MPa - Blue > 15 bar - 1.5 MPa

In any case, the pressure of the machine should not exceed the permissible pressure rate imprinted on the pressure switch.

# **INSTALLATION**

When installed on machines that produce hot water, the pressure switch has to be fitted in front of the heat generator. This accessory has to be installed on a finished machine. Electrical installation has to be carried out by a qualified person.

ATTENZIONE !! - Always assure earth wiring to the electric device.

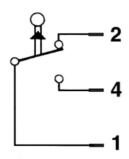

#### **WIRING DIAGRAM**

1) RED - 2) BLUE - 4) BROWN

#### **ELECTRICAL CONNECTION**

N.O. RED + BROWN - Normally opened N.C. RED + BLUE - Normally closed

#### **OPERATIONS**

The PR16 Pressure switch signals the surpass of a pre-set pressure, through a piston, which operates a switch lever. The set pressure of 45bar - 4.5 MPa is of the fixed type.

#### PROBLEMS AND SOLUTIONS

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
Pressure switch does not function	Electric connection faulty or loose Rupture of microlever Rupture of piston spring Rupture of microcontacts Jammed piston	Check and/or replace Replace microswitch Replace Replace microswitch Check and/or replace
Fluid in the casing	Damaged piston seals Damaged nut seals	Check and/or replace Check and/or replace

## **REGULATIONS:** see norm manual

The accessory hereby described bears the CE marking in accordance with the Norms and Directives applied on the **Declaration of Conformity**.

For a correct utilization, follow the directions described in this manual and re-print them on the <u>Use and maintenance</u> manual of the machine

Make sure that you are given the Original Conformity Declaration for the accessory chosen. The present manual is valid for all Pressure switches named **PR16** 

#### **SPARES**

Use only original PA spares, in order to benefit for a correct function and long reliability.

#### **MAINTENANCE**

STANDARD: every 400 working hours (circa 10,000 cycles), check and lubricate the seals with water resistant grease.

SPECIAL: every 800 working hours (circa 20,000 cycles), control the wear of the seals and internal parts and if necessary, replace with original PA parts taking care during installation and to lubricate with water resistant grease.


Maintenance has to be carried out by Specialized Technicians

For a correct assembly, follow the phases indicated on the exploded view referred.

The manufacturer is not to be considered responsible for damage as a result from incorrect fitting and maintenance

Technical data, descriptions and illustrations are indicative and liable to modification without notice

29.0035.10 PR16 press.sw.,sst,3/8M Bsp 40bar black 29.0035.15 PR16 press.sw.,sst,3/8M Bsp 25bar red 29.0035.25 PR16 press.sw.,sst,1/4M Bsp 25bar red 29.0035.30 PR16 press.sw.,sst,1/4M Bsp 40bar black 29.0035.50 PR16 press.sw.,sst,1/4M Npt 40bar black 29.0035.52 PR16 press.sw.,sst,1/4M Npt 25bar red 29.0035.62 PR16 press.sw.,sst,3/8M Npt 25bar red 29.0040.00 PR16 press.sw.,brass,3/8M Bsp 40bar blck 29.0040.20 PR16 press.sw.,brass,1/4M Bsp 40bar blck 29.0040.30 PR16 press.sw.,brass,1/4M Bsp 25bar red 29.0040.40 PR16 press.sw.,brass,1/4M Bsp 15bar blue

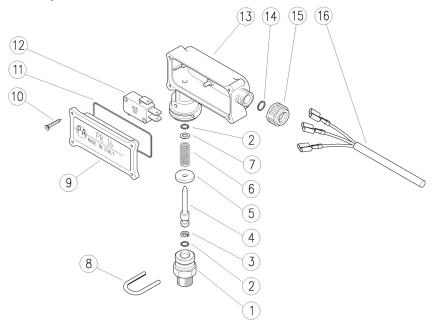

Pos.	P/N	Description	Q.ty	K1	K2	K3	K4	T
1	29.0045.51	Housing, 1/4M Bsp Sst. (1)	1					5
1	29.0044.51	Housing, 3/8M Bsp Sst. (2)	1					5
1	29.0046.51	Housing, 1/4M Npt Sst. (3)	1					5
1	29.0047.51	Housing, 3/8M Npt Sst. (4)	1					5
1	29.0081.31	Housing, 1/4M Bsp brass (5)	1					5
1	29.0044.31	Housing, 3/8M Bsp brass (6)	1					5
2	10.3038.00	O-ring, 1,78x3,68 mm	2	•				10
3	10.4002.00	Back-up ring, opn. 4,2x7x1,5 mm	1	•	•			10
4	29.0043.31	Piston, PR16 brass	1					10
5	29.0086.31	Washer, 4x16x2,5 mm brass	1					10
6	29.0094.51	Spring, 1,3x8x18 mm Sst.	1					10
6	29.0085.61	Spring, 1,4x8x18 mm Sst.	1					10
6	29.0084.61	Spring, 1,6x8x18 mm Sst.	1					10
								X

Pos.	P/N	Description	Q.ty	K1	K2	К3	K4	
7	14.3519.00	Washer, 4x8x0,5 mm brass	1					10
8	29.0087.51	U-bolt, Sst.	1					10
9	29.0042.84	Lid, PR16 PA black	1					5
10	16.3020.00	S/tapp. screw, DIN7981 2,5x12mm nick.pl.	4					10
11	10.3210.42	O-ring, 2,62x42,52 mm	1	•	•			10
12	12.5001.00	Microswitch, 16A 250V	1					10
13	29.0041.84	Casing, PR16 PA black	1					5
14	10.3109.92	O-ring, 2,4x7,3 mm	1	•	•			10
15	29.0110.84	Locknut for cable gland, PA blue	1					50
15	29.0109.84	Locknut for cable gland, PA red	1					10
15	29.0082.84	Locknut for cable gland, PA black	1					10
16	12.5000.00	Câble, 3x1 L.1200 mm	1					10

U	27.0003.01	Spring, 1,4x0x10 min 33t.				10
6	29.0084.61	Spring, 1,6x8x18 mm Sst.		1		10
Kit	P/N		Description			
K1	29.0036.24	Spares kit -PR16, 4x10pcs.				1
K2	29.0048.24	Spares kit -PR1-PR16, 4×1	DCS.			1

(1) 29.0035.25-30 (2) 29.0035.10-15 (3) 29.0035.50-52 (4) 29.0035.62 (5)

(6) 29.0040.00